

G15 series

LAYOUT	BUTTON	CODE	REPEAT	
		00H		
	UP	01H		
	DOWN	02H		
EXIT	ESCAPE/EXIT	03H	×	
	COMPUTER	10H	×	TOGGLE
	VIDEO	11H	×	TOGGLE
QUICK ALIGN.	QUICK ALIGN	13H	×	
OPERATE	POWER ON/OFF	17H		TOGGLE
HIDE	HIDE(PICTURE & VOLUME)	1DH	×	
	VOLUME +	1EH		
	VOLUME -	1FH		
ZOOM T	ZOOM T	23H		
ZOOM W	ZOOM W	24H		
MENU	MENU	2EH	×	
ENTER	ENTER	2FH	×	
	RIGHT	34H		
	LEFT	36H		
FOCUS +	FOCUS +	3CH		
FOCUS -	FOCUS -	3DH		