

IR Remote Controller Code Conversion Table for DLA-SX21 Series

Button	Code	Remarks
↑	01H	
↓	02H	
EXIT	03H	
PRESET	04H	
POWER ON	05H	Special Soft Required
POWER OFF	06H	Special Soft Required
FREEZE	0FH	
PC	10H	
VIDEO	11H	
QUICK ALIGN	13H	
OPERATE	17H	
V-KEYSTONE(+)	1BH	
V-KEYSTONE(-)	1CH	
HIDE	1DH	
VOLUME (+)	1EH	
VOLUME (-)	1FH	
DIGITAL ZOOM(+)	2AH	
DIGITAL ZOOM(-)	2BH	
MENU	2EH	
ENTER	2FH	
→	34H	
←	36H	
FOCUS (+)	3CH	
FOCUS (-)	3DH	
H-KEYSTONE(+)	40H	
H-KEYSTONE(-)	41H	
PC1	46H	
PC2	47H	
DVI	48H	
VIDEO	4BH	
Y/C	4CH	
COMP	4DH	Special Soft Required
SCREEN (W)	56H	
SCREEN (S)	57H	

IR Remote Controller Code Conversion Table for DLA-SX21S Series

Button	Code
↑	01H
↓	02H
EXIT	03H
PRESET	04H
POWER ON	05H
POWER OFF	06H
FREEZE	0FH
PC	10H
VIDEO	11H
QUICK ALIGN	13H
OPERATE	17H
V-KEYSTONE(+)	1BH
V-KEYSTONE(-)	1CH
HIDE	1DH
VOLUME (+)	1EH
VOLUME (-)	1FH
DIGITAL ZOOM(+)	2AH
DIGITAL ZOOM(-)	2BH
MENU	2EH
ENTER	2FH
→	34H
←	36H
FOCUS (+)	3CH
FOCUS (-)	3DH
H-KEYSTONE(+)	40H
H-KEYSTONE(-)	41H
PC1	46H
PC2	47H
DVI	48H
VIDEO	4BH
Y/C	4CH
COMP	4DH
SCREEN (W)	56H
SCREEN (S)	57H