

ILA-12K Installation Guide

Table of Contents

1. Component Parts

| | |
|------------------------|-----|
| Component Parts | 1-1 |
| Tool Kit | 1-2 |
| Safety Equipment | 1-3 |

2. Location Considerations

| | |
|-----------------------------|-----|
| Placing the Projector | 2-1 |
| Lens Selection | 2-2 |

3. Installation Requirements

| | |
|--|-----|
| Projector Dimensions | 3-1 |
| Projector Weight | 3-2 |
| Physical Access and Air Flow Clearance | 3-3 |
| Exhaust Air Venting | 3-4 |
| Electrical Requirements | 3-5 |

4. Projection Module Installation

| | |
|--------------------------------------|-----|
| Projection Module Orientation | 4-1 |
| Leveling the Projection Module | 4-2 |
| Tilt the Projection Module | 4-3 |

5. Arc Lamp Module Installation

| | |
|---|-----|
| Attaching the Illumination Module | 5-1 |
| Illumination Module Connections | 5-4 |
| Arc Lamp Bulb Installation | 5-6 |

6. System Connections

| | |
|-----------------------------------|-----|
| System Power Connections | 6-1 |
| Terminal or Tethered Remote | 6-2 |
| Powering ON the Projector | 6-2 |

7. Projector Alignment

| | |
|-------------------------------------|-----|
| Projector-to-Screen Alignment | 7-1 |
| Arc Lamp Alignment | 7-3 |
| Lamp Current Adjustment | 7-5 |
