
USER'S GUIDE

Model 250 Projector



2310 Camino Vida Roble
Carlsbad, California 92009

Phone: (760) 929-5300
Fax: (760) 929-5410

DECLARATION OF CONFORMITY

PER ISO/IEC GUIDE 22 AND EN 45014

Manufacturer: Hughes JVC Technology Corporation
2310 Camino Vida Roble
Carlsbad, Ca 92009-1504
USA

Hughes-JVC declares that this product conforms to the following Product Specifications (Directive/Standard):

Safety: EN 60950
IEC 950 (1992)

EMC: EN 55022 (1988) / CISPR-22 (1986) Class "A"
EN 50082-1 (1992) / IEC 801-2(1991)
EN 50082-1 (1992) / IEC 801-3(1984)
EN 50082-1 (1992) / IEC 801-4(1988)

ANSI C63.4-1992, FCC, Part 15, Class A

In addition, the above product complies with the requirements of the Low Voltage Directive 73/23 EEC and the EMC Directive 89/336/EEC.

106785 First Edition

April 1999

© Copyright 1999 by Hughes-JVC Technology Corporation.

All worldwide rights reserved.

This manual was produced by Hughes-JVC Technology Corporation and may be revised without prior notice.

No part of this manual may be reproduced in any form without the express written permission of Hughes-JVC Technology Corporation.

ILA[®] is a registered trademark of Hughes-JVC Technology Corporation.

Portions of this User's Guide dealing with safety and power have been translated into German and French. The translated sections immediately follow the English sections.

Table of Contents

| | |
|---|------|
| Safety Information | v |
| Chapter 1 Introduction | |
| 1.1 Shipping and Inspection..... | 1-1 |
| 1.2 Items Shipped with the Model 250 | 1-1 |
| 1.3 Options | 1-2 |
| 1.4 Projector Control | 1-2 |
| 1.5 Right and Left Orientation..... | 1-2 |
| 1.6 Acronyms Used in Manual..... | 1-3 |
| 1.7 Software Updating | 1-3 |
| Chapter 2 Installation Parameters | |
| 2.1 Physical Dimensions | 2-1 |
| 2.2 Physical Access and Thermal Clearance..... | 2-3 |
| Chapter 3 Installation | |
| 3.1 Before Installation-Location Considerations | 3-1 |
| 3.2 Projector-to-Screen Alignment | 3-2 |
| 3.3 Lens Throw Distance and Screen Width | 3-3 |
| 3.4 System Connections | 3-5 |
| 3.5 Sources | 3-6 |
| Chapter 4 Operation | |
| 4.1 Executive Remote | 4-1 |
| 4.2 Service Remote | 4-3 |
| 4.3 Power On Sequence | 4-6 |
| 4.4 Navigating the Menu | 4-9 |
| 4.5 Full Menu Structure | 4-10 |
| 4.6 Selecting a Channel | 4-13 |
| 4.7 Attaching a Source | 4-14 |
| 4.8 Picture Settings | 4-16 |
| 4.9 Menu Item Definitions..... | 4-17 |
| 4.10 Short Menu Structure..... | 4-20 |
| 4.11 PC or VT-100 Terminal Control..... | 4-20 |
| Chapter 5 Setup Adjustments | |
| 5.1 Test Patterns | 5-3 |
| 5.2 Projection Lens Focus (Rough) | 5-4 |
| 5.3 Setup Preparation..... | 5-4 |
| 5.4 Timing Settings and Adjustments..... | 5-9 |
| 5.5 Geometric Adjustments | 5-11 |
| 5.6 ILA [®] Sensitivity and Bias | 5-24 |
| 5.7 Convergence (XY Registration) | 5-25 |
| 5.8 Black Level (G ₂) and Sensitivity Offset..... | 5-31 |
| 5.9 Uniformity (Shading)..... | 5-33 |
| 5.10 Picture Settings | 5-36 |

| | |
|--|------|
| 5.11 Backing up Settings | 5-38 |
| 5.12 Input Cards..... | 5-39 |
| 5.13 Updating Software..... | 5-48 |
| Chapter 6 Maintenance | |
| 6.1 Preventive Maintenance | 6-1 |
| Chapter 7 System Specifications | |
| Image Quality | 7-1 |
| Input Capability | 7-1 |
| Source Inputs | 7-1 |
| Control Ports..... | 7-2 |
| Operating Parameters | 7-2 |
| Power Plugs | 7-2 |
| Installation..... | 7-2 |
| Accessories (Included)..... | 7-3 |
| Accessories (Optional)..... | 7-3 |
| Lens Options | 7-4 |
| Appendix A, Extron Switcher Interface | A-1 |
| Appendix B, Import/Export | B-1 |
| Glossary of Terms | C-1 |