
OPERATOR'S MANUAL

Model 370SC Projector

With preshaded, preset channels and easy setup software.

DECLARATION OF CONFORMITY

PER ISO/IEC GUIDE 22 AND EN 45014

Manufacturer: Hughes JVC
2310 Camino Vida Roble
Carlsbad, Ca 92009
USA

Hughes-JVC declares that this product conforms to the following Product Specifications (Directive/Standard):

Safety: EN 60950
IEC 950 (1992)

EMC: EN 55022 (1988) / CISPR-22 (1986) Class "A"
EN 50082-1 (1992) / IEC 801-2(1991)
EN 50082-1 (1992) / IEC 801-3(1984)
EN 50082-1 (1992) / IEC 801-4(1988)

ANSI C63.4-1992, FCC, Part 15, Class A

In addition, the above product complies with the requirements of the Low Voltage Directive 73/23 EEC and the EMC Directive 89/336/EEC.

104823 First Edition

June 1997

Confidential and proprietary information.

© Copyright 1997 by Hughes-JVC Technology Corporation.

All worldwide rights reserved.

This manual was produced by Hughes-JVC Technology Corporation and may be revised without prior notice.

No part of this manual may be reproduced in any form without the express written permission of Hughes-JVC Technology Corporation.

ILA® is a registered trademark of Hughes-JVC Technology Corporation.

Table of Contents

Safety Information	v
Chapter 1 Introduction	
1.1 Shipping and Inspection	1-1
1.2 Items Shipped with the Model 370SC.....	1-1
1.3 Options.....	1-2
1.4 Projector Control	1-2
1.5 Right and Left Orientation	1-2
1.6 Acronyms Used in Manual.....	1-3
1.7 Projector Data Backup Disk.....	1-3
Chapter 2 Installation Parameters	
2.1 Physical Dimensions	2-1
2.2 Physical Access and Thermal Clearance	2-2
Chapter 3 Installation	
3.1 Before Installation - Location Considerations	3-1
3.2 Physical Access and Thermal Clearance	3-1
3.3 Projector-to-Screen Alignment	3-2
3.4 Lens Selection.....	3-3
3.5 System Connections	3-8
3.6 Video Sources.....	3-8
3.7 Connections Checklist.....	3-10
Chapter 4 Projector Adjustments	
4.1 Power-On Sequence	4-2
4.2 Channels (Selecting, Changing, Preparing New)	4-3
4.3 Setup Preparation	4-5
4.4 Test Patterns.....	4-8
4.5 Projector Positioning	4-9
4.6 Projection Lens Focus and Alignment.....	4-10
4.7 ILA® Bias Setting.....	4-11
4.8 G-2 (Black Level).....	4-13
4.9 Focus	4-14
4.10 Geometric and Image Adjustments	4-17
4.11 Convergence/Shading Cursors and Keys	4-25
4.12 XY Axis Registration Adjustment.....	4-32
4.13 Shading	4-34
4.14 Proportional Offset	4-40
4.15 Picture Settings	4-41
4.16 Graphic Enhance.....	4-42
4.17 Update Defaults	4-43
4.18 Copy Channel/Copy Parameters.....	4-43
Chapter 5 Operation	
5.1 Infrared (I/R) Technician Remote	5-1
5.2 Tethered Technician Remote	5-5

5.3 Infrared (I/R) Executive Remote.....	5-7
5.4 Keyboard Command Equivalents.....	5-10
5.5 Menu Structure	5-11
5.6 Menu Item Definitions	5-13
5.7 Autoselect.....	5-16
5.8 Remote Control DIP Switch Settings.....	5-19

Chapter 6 Maintenance

6.1 Preventive Maintenance	6-1
----------------------------------	-----

Chapter 7 System Specifications

Picture Quality.....	7-1
Input Capability	7-1
Video Inputs.....	7-1
Control Ports.....	7-2
Operating Parameters.....	7-2
Physical Characteristics	7-2
Installation.....	7-3
Accessories (included)	7-3
Accessories (optional).....	7-3
Lens Options.....	7-4
Lens Parameters.....	7-4

Chapter 8 Troubleshooting Guide

Table 8-1. Troubleshooting Guide	8-1
--	-----

Chapter 9 Parts List9-1

Appendix A Projector Interface and Communications

Specification-(PC Operation)	A-1
---	-----

Appendix B Glossary of Terms.....B-1

Service Bulletin 9308